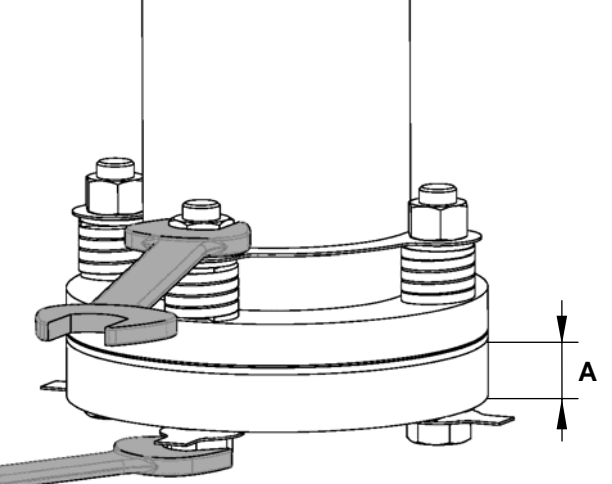
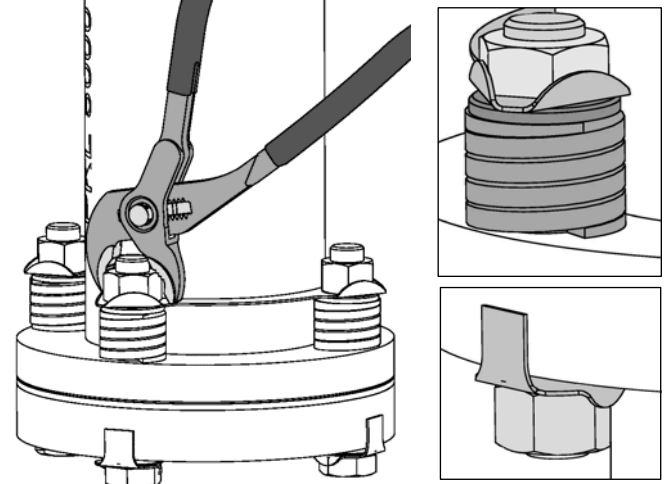



The damping springs must **always** be mounted on the side of the PKL.

Installation (Mounting possibility 1):

	
<ul style="list-style-type: none"> • Tighten the nuts (Pos. 1) equally, until the damping springs (Pos. 4) are completely compressed. • Then loosen the nuts (Pos. 1) one turn. <p> The damping springs (Pos. 4) must not be completely compressed!</p> <ul style="list-style-type: none"> • The included bolts are for mounting plates with a thickness up to A. 	<ul style="list-style-type: none"> • Fold all securing ears of the NBS lock plates (Pos. 2) against each nut (Pos. 1). • Then fold all securing flaps of the lock washers (Pos. 5) against the mounting plate and the securing ears against the bolt heads (Pos. 6). • The screws and nuts are safe from turning now. • Screw connections and screw locks should be checked after one hour of operation (after first operation) and then at regular intervals.